

## X.O. Loft Bed Instructions

Note: The same instructions apply to the 2" x 6" and the 2" x 8" Post. This Bed includes the optional Double Bookcase at the headboard.

### Step 1.



Lay down the two head posts and insert the 3-Bookcase Shelves 2" x 8" x Twin, Full or Queen Size.

In the pre drilled grooves.

**Step 2.**



**Drill 2-2-1/4" Course Screws for each shelf on each side.**

**Step 3.**



**Install the two horizontal beams, as shown, in the same direction as shown. There is a half lap at the location shown that the beams will slide into. Attach with the 2-1/4" Course Screws.**

**Step 4.**









**Turn the two headboard posts up and attaché the two angled legs. Attach  
The mending plate with 1" Course Screws. In the hole shown screw a 3" Course  
Screw on both legs.**

**Step 5.**

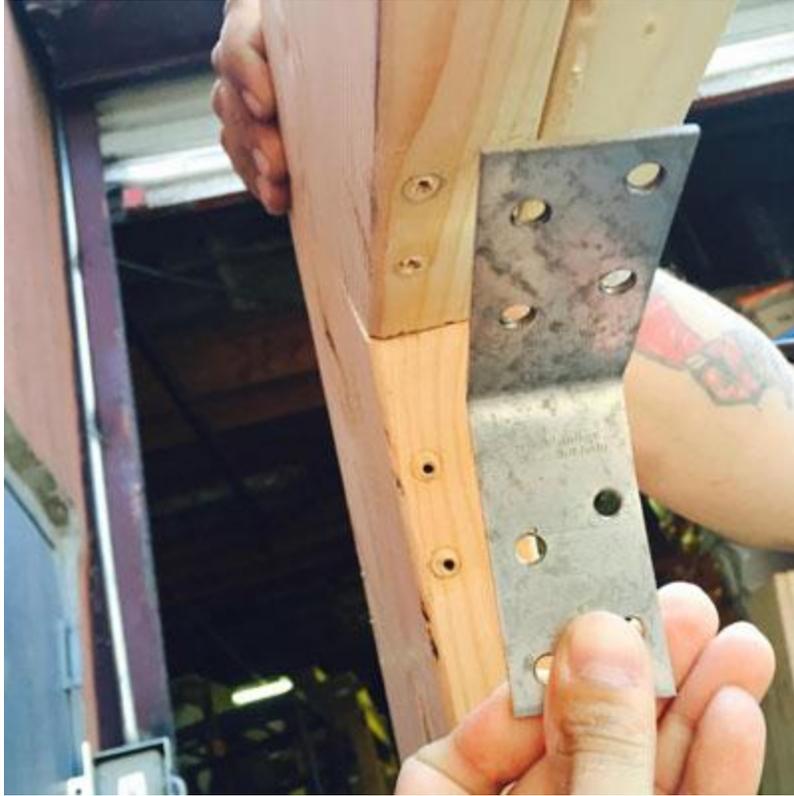

**Install metal angle bracket under each leg using the 2-1/4" Course Screws.**

**Step 6.**

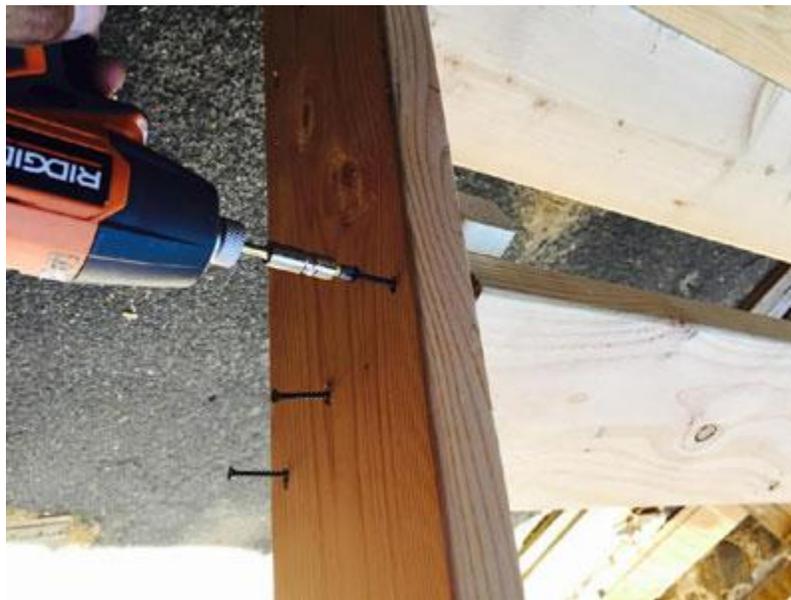


**Lay the 4-Steps 2" x 8" x Twin, Full or Queen Size. Screw the 2-1/4" Course Screws from the top of the step into the existing 2" x 2" ledge. Screw the 2-1/4" Course Screws into the pilot holes of the legs, to each step.**

**Step 7.**



**Lay the 2 pieces of  $\frac{3}{4}$ " plywood on the 2" x 2" ledge and screw down with 1" Course Screws into the pilot holes.**

**Step 8.**

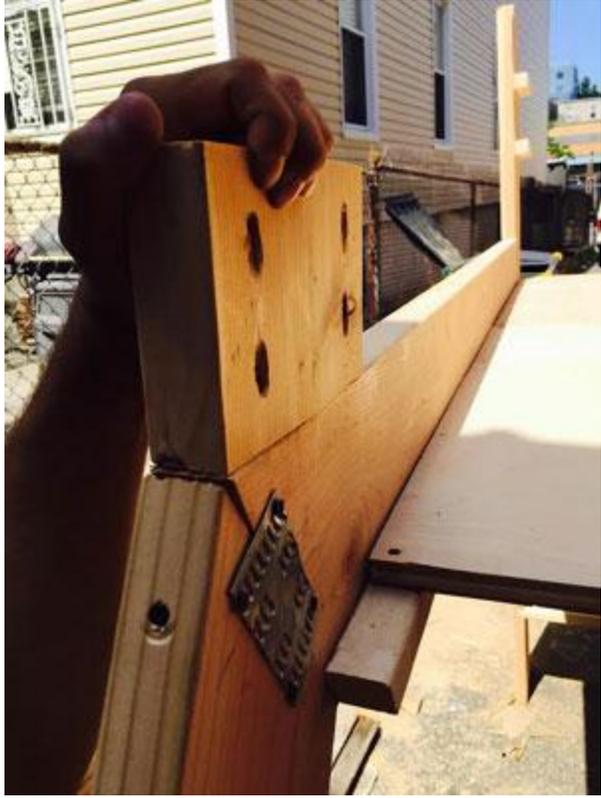

**Install spacer bar for the safety rail. Screw the 2-1/4" Course Screws to the Front Rail on the bottom and the Safety Rail on the top.**

**Step 9.**



**Place 2" x 6" Safety Rail on to the Spacer Bar. Using the 2-1/4" Course Screws screw from the Spacer Bar Up to the Safety Rail.**

**Step 10. (Optional)**



**Install Two 2" x 8" x Twin, Full or Queen Size. Screw down 2-1/4" Drywall Screws onto the 2" x 2" ledge and to the sides in the pilot holes. Note: you may want to install the bottom shelf first so that you can screw down.**

## Parts List

**2- Headboard Posts 2" x 6" or 8". 69" Tall. With the Bookcase Headboard it will be 83" Tall. Pre notched. Includes the 2" x 2" ledge if the optional Double Bookcase is ordered.**

**2-Angled Rails for the Steps. 69" Long for the regular bed and 82" long for the 83" tall bed. Includes 2" x 2" for the Step Support.**

**2-Rails for the front and back. Includes a 2" x 2" ledge. Will be 75" long for the Twin and Full Size Beds. Will be 80" long for the extra long or Queen Size Beds. 83" for the Dorm XXL Bed.**

**2-Metal Mending Plates**

**2-Metal Angle Supports**

**2-Pcs of ¾" Board for the mattress support.**

**2-Shelves 2"x6" or 2"x8" x Twin, Full or Queen Size. (Optional If Ordered)**

**4-Spacer for the safety rails.**

**2-Safety Rails 2" x 6" x 75" or 80" or 83"**

**4-Steps 2" x 6" x Twin, Full or Queen Size. Note: For the extra tall bed you will receive 5 Steps.**

**104-2-1/4" Course Drywall Screws.**

**2-3" Course Drywall Screws.**

**14-1" Course Drywall Screws.**

